



Manual Tile Cutter *A-Series* - ATC469



Please read the instructions carefully before using the machine.

TECHNICAL DATA

Max. Cutting length	1000mm
Max. Cutting thickness	12mm
diagonal cutting	560X560mm
cutting wheel	Φ 22X Φ 6X6(2) with bearing

WARNING

- ⚠ Please read the manual carefully before use.
- ⚠ The manufacturer accepts no responsibility for this tile cutter used with other tools, or for cutting any other materials except tiles.
- ⚠ The machine should be laid flat when cutting.
- ⚠ Inspect machine before every use; do not use if parts are loose or damaged.

ASSEMBLE

Your Tile Cutter comes partially assembled, and may or may not require the following assembly steps before it is ready for use.





- 1、 Loosen the knob, attach the ruler to the slot of the graduation ruler.
- 2、 Tighten in place with the Knob.

OPERATION

Be sure to place the cutter on a flat and even surface when in use.

Do not exert too much force on the cutter or tiles, or tiles will be broken.

After you cut tiles, be alert that the newly cut edge will be sharp.

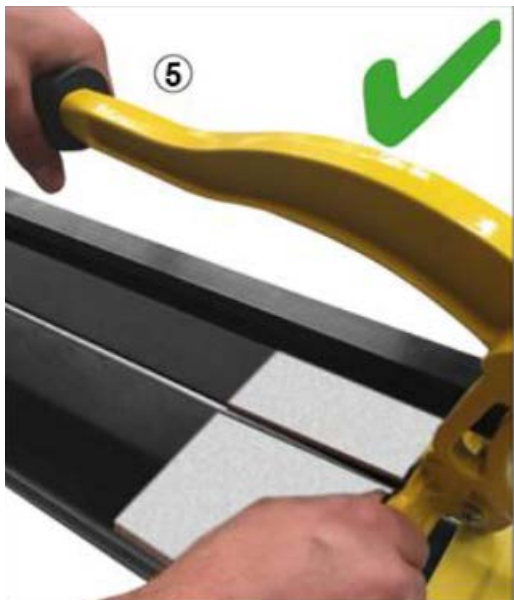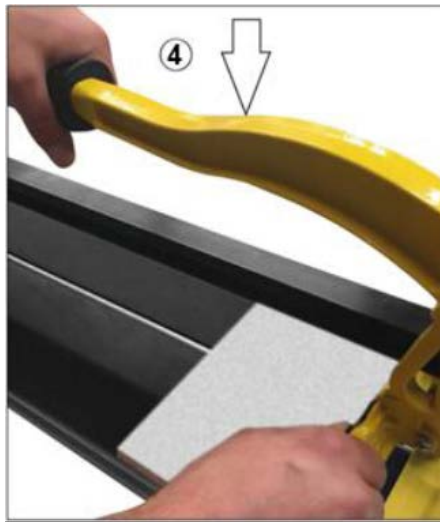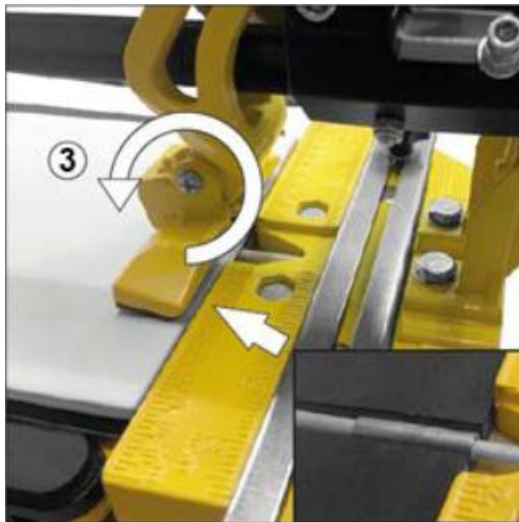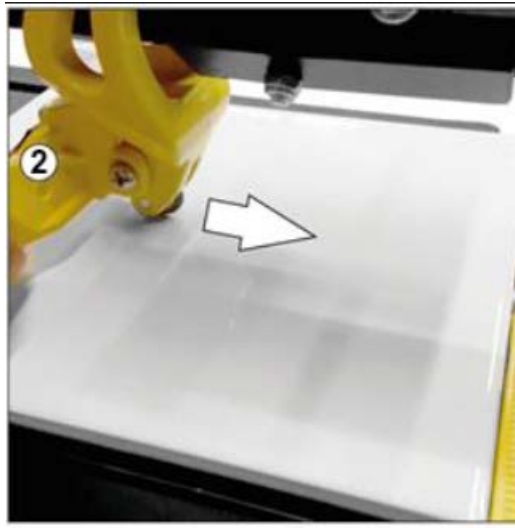

Instructions step by step

- 1、 Position the cutting wheel on the rear edge of the tile
- 2、 Applying moderate pressure to the cutting wheel, and score the full length of the tile in one, continuous motion

- 3、 Flip the breaker bar down and use the handle to position the breaker foot slightly away from the front edge of the tile.
- 4、 Apply increasing downward pressure on the handle
- 5、 The tile snaps along the score line

MAINTENANCE



All service and repair works must be done by skilled professionals only.

The Tile Cutter requires little regular maintenance.

1. Clean the Tile Cutter after using by removing tile debris.
2. Lubricate the Guide Rods periodically.
3. Store and cover the Tile Cutter when not in use. Always store in a dry location