

 


INSTRUCTION

A-Series

1000mm

PROFESSIONAL TILE CUTTER

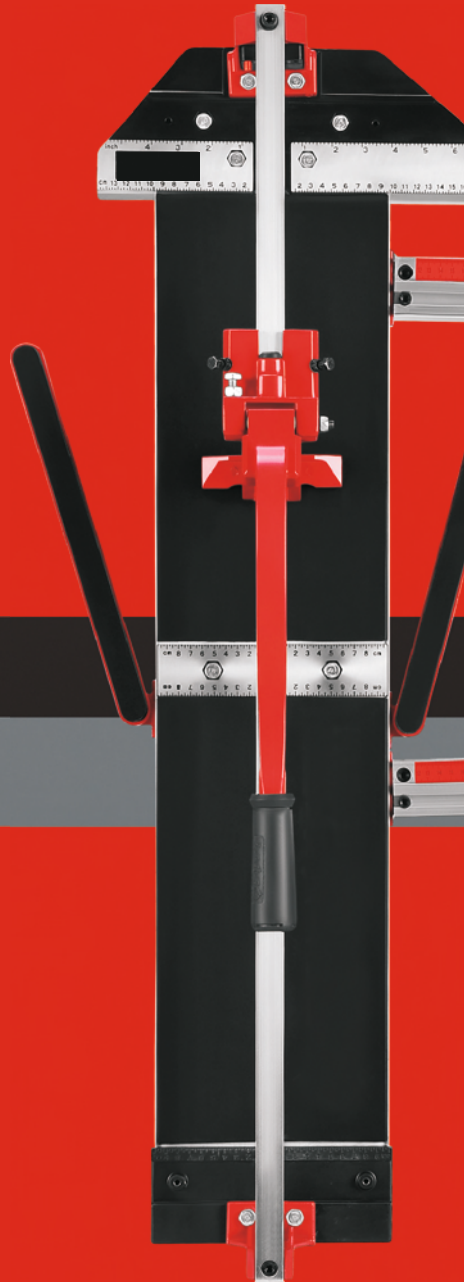

Professional Tile Cutter

OPERATION NOTE


1. Please use machine on the flat surface in case that the base is warped.
2. If the particle of the tile goes into the slide assembly, it may can't slide smoothly.
3. The machine is adjusted. If you don't know how to adjust, don't disassemble except the breaking parts, the scoring wheel and the guide ruler.
4. Don't try to cut the size which is beyond the max cutting of machine.

MAINTENANCE

1. Clean the tile cutter after using by removing tile debris especially on the sliding bars and sliding assembly.
2. Lubricate the sliding assembly and the scoring wheel periodically.
3. Store in box when not use. Always store in the dry place.
4. If any parts are broken or missing, please go to the distributor for the new parts.

Professional Tile Cutter

1. LOCATING

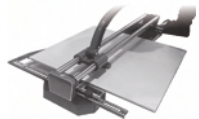

Double Bar

First, confirm what line you want, then mark with soft pencil and adjust the guide ruler as your plan. Put the tile against the ruler and the head of the machine. The marked pencil line should be straightly under the scoring wheel.



Single Bar

2. SCORING



Double Bar

One hand hold the tile firmly and the other hand to lift the handle and slide to your body. Make sure the scoring wheel on the marked line then push the handle with a certain pressure to make sure scoring a clear symmetrical line on the tile. If the pressure is too heavy, it may reduce the work life of scoring wheel. But if the line is not clear, it may can't cut tidily.



Single Bar

3. BREAKING



Double Bar


Lift the handle and make sure the pressing plate is on the tile, increase the pressure to the handle until the tile is broken into two parts. In order to protect the machine and the tile, don't use too much pressure to break.



Single Bar

Professional Tile Cutter

1. LOCATING

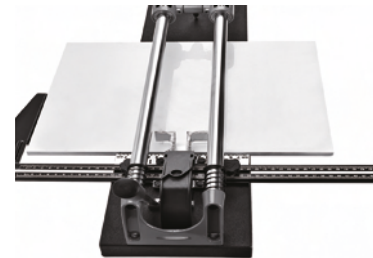

First, confirm what line you want, then mark with soft pencil and adjust the guide ruler as your plan. Put the tile against the ruler and the head of the machine. The marked pencil line should be straightly under the scoring wheel.

2. SCORING



One hand hold the tile firmly and the other hand to lift the handle and slide to your body. Make sure the scoring wheel on the marked line then push the handle with a certain pressure to make sure scoring a clear symmetrical line on the tile. If the pressure is too heavy, it may reduce the work life of scoring wheel. But if the line is not clear, it may can't cut tidily.

3. BREAKING



Hold the right handle and pull back, and then the tile is broken into two parts.