





Tile Rite Bath & Shower Seal UK


1. Completely cover the walls with the Tile Rite Waterproof Wall Matting in accordance with the relevant instructions.
2. Ensure the floor and drainage is fully prepared ready for the bath or shower tray.

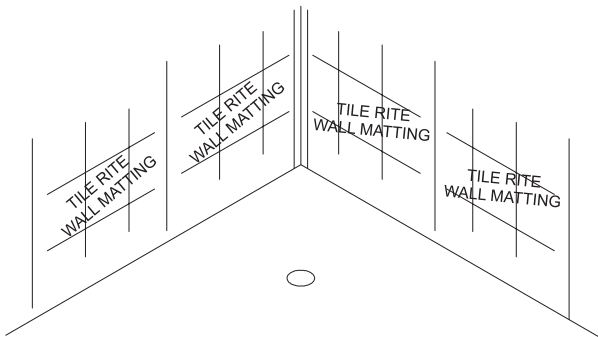

3. Clean the outside surfaces of the bath or shower tray in preparation for the Tile Rite Bath & Shower Seal and make sure there is no residue of any cleaning product left on the surface.
4. Cut the seal to the correct length and peel off enough of the backing tape to cover the first side of the bath / tray. Firmly stick the adhesive strip to the outside edges where it will meet the walls. Press with a roller or similar tool to ensure 100% contact of the adhesive. Peel back the rest of the backing tape and continue around the required edges.

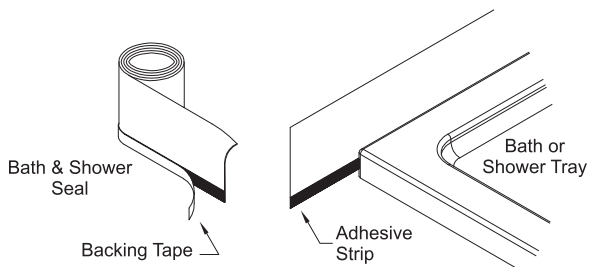

5. Using a notched trowel, apply powder based flexible adhesive to the walls along the area where the seal will sit and level with the top of the bath / shower tray to allow for any movement. Press the seal and bath / tray in place. Smooth out any air pockets and excess mortar.

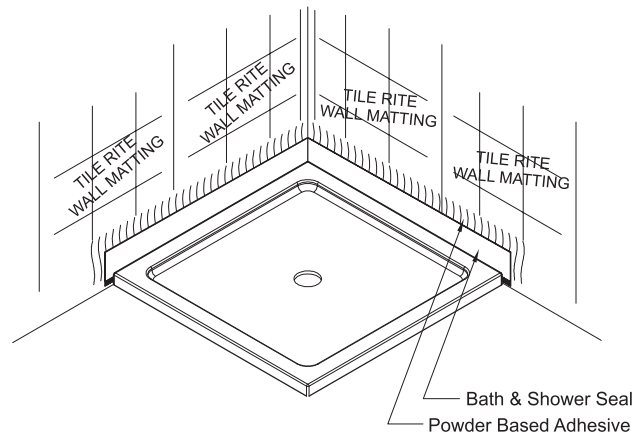

6. Push the foam beading down between the bath / tray and the Tile Rite Seal, so that the adhesive tape is hidden. This will protect the adhesive from reacting with any silicone sealant used during tiling.

